




Ultrasonic Sensor Installation and Replacement Instructions



www.clubcar.com

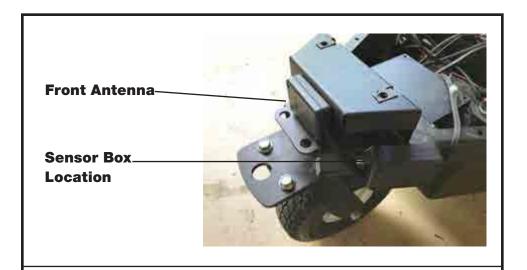

Sensor Box







Ultrasonic Sensor Replacement Tips

- 1). Unscrew the middle of each broken sensor cable first.
- 2). Remove the sensors from the Tempo Walk plastic top by pushing them out from behind. (See pic 1)
- Replace sensors, and make sure to orient correctly.
 Note: Handle sensors gently, insert by using outside edge, avoid pressing the center of sensor.
- 4). Route cables to stay above the front caster wheel. (See pic 2)
- 5). Screw in firmly each sensor connector to its corresponding cable. (See pic 3A)
- 6). Test sensors when Tempo Walk is powered on to make sure they are operating correctly

HOW TO RESET "DISABLED" SENSORS OR SYSTEM

Once the necessary repairs have been made, follow these steps.

Step 1: Turn on the Tempo Walk, and wait for the start-up chime

Step 2: Wait for the audio about the disabled sensors approx. 5 secs)

Step 3: Press the neutral button "N" twice (Located on the dashboard)

